

RILIX COASTER VR



ASSEMBLY MANUAL

VERSION 24.1




STEP 01

Unpacking and Assembling

1

Cut the plastic straps.

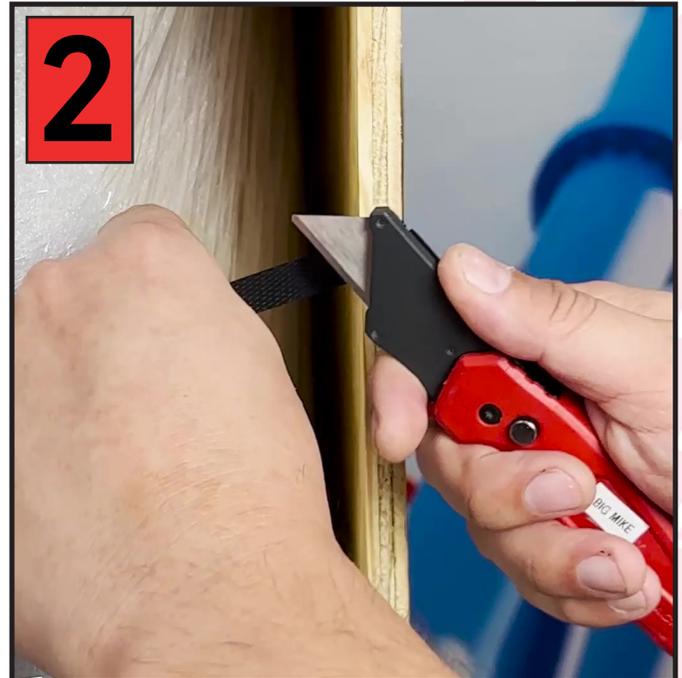

2 Unscrew and remove the wooden side panels from both sides.



3 Cut the plastic film from the back and remove it. Do not cut the plastic straps yet.



4 Remove the seat, leaning it forward.



5 While another person holds the simulator's base, carefully cut the plastic strap




6 Hold the hood and base together, and lay the simulator's base on the ground.




7 Remove the internal protection and the marquee.



8 Remove the hood.

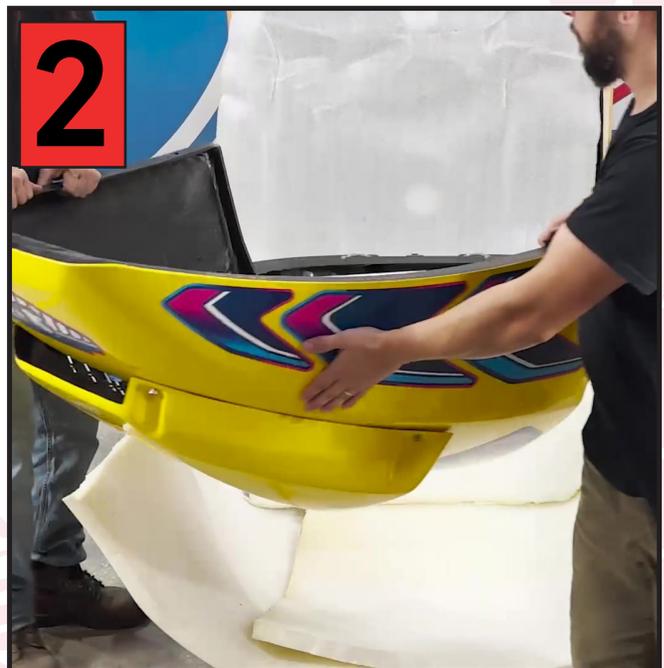

9 Remove all the internal parts.

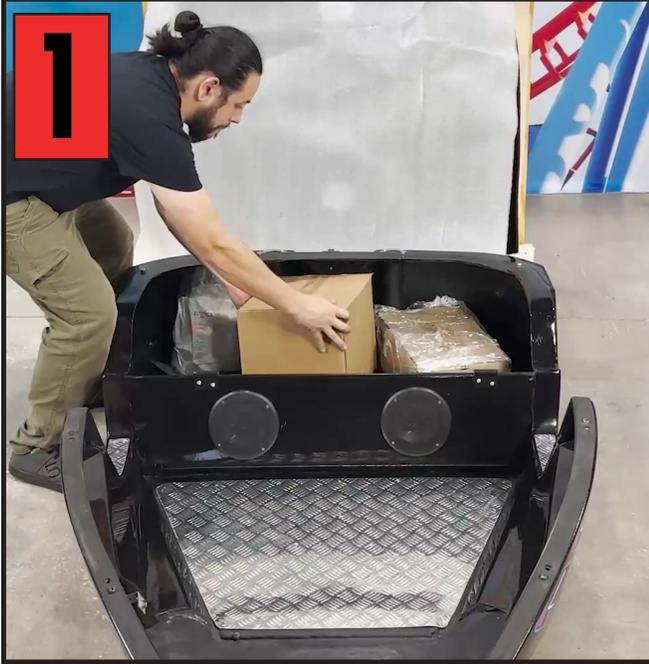


10

Position the hood on top of the base, ensuring the guiding pins are properly aligned.



11

Connect the wind system cable.
Twist the connector's cap to secure it.

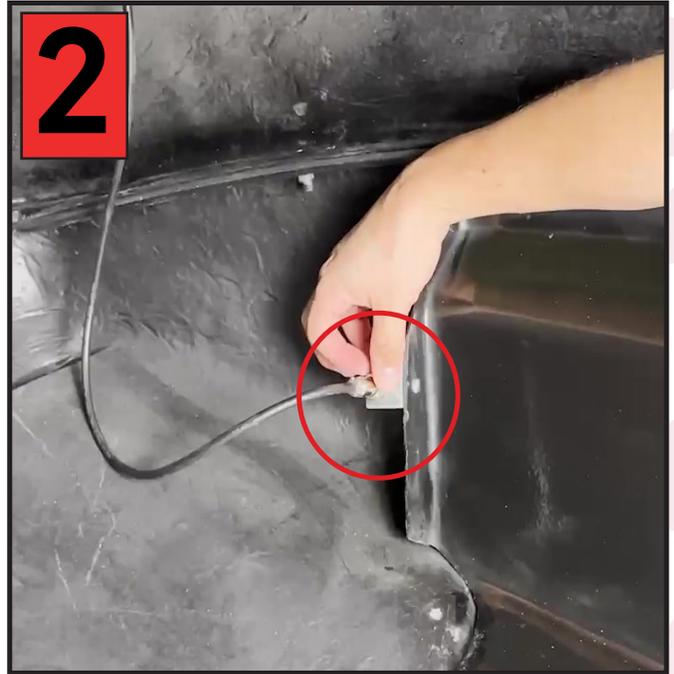

12

Secure the hood with the four provided screws.
Fasten the screws using a 13mm wrench.



13

Carefully cut and remove the plastic film from the internal protection.




14

Install the internal protection by fitting the top part into the indicated holes.



15

Using the 13mm wrench, fasten the two provided screws on the bottom.

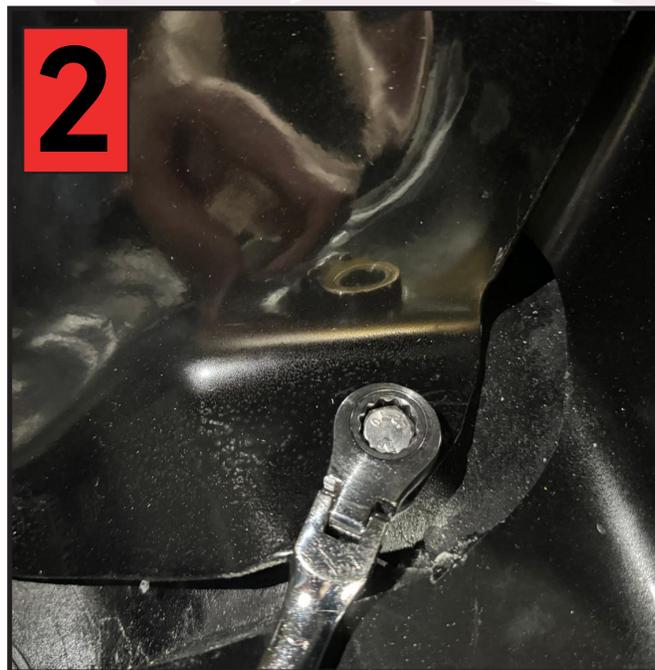

16

Position the seat, aligning the hinge pins.



17

Unwrap the stainless steel tubes.



18

Insert the stainless steel tubes into the holes at the back of the base.



19

While one person holds the back display, cut the remaining plastic strap.



20

With two people, grab and flip the back display module. Then lift and position the back display holes onto the stainless steel tubes.




21

Remove the plastic film from the marquee.





22

Using a ladder, position the marquee.

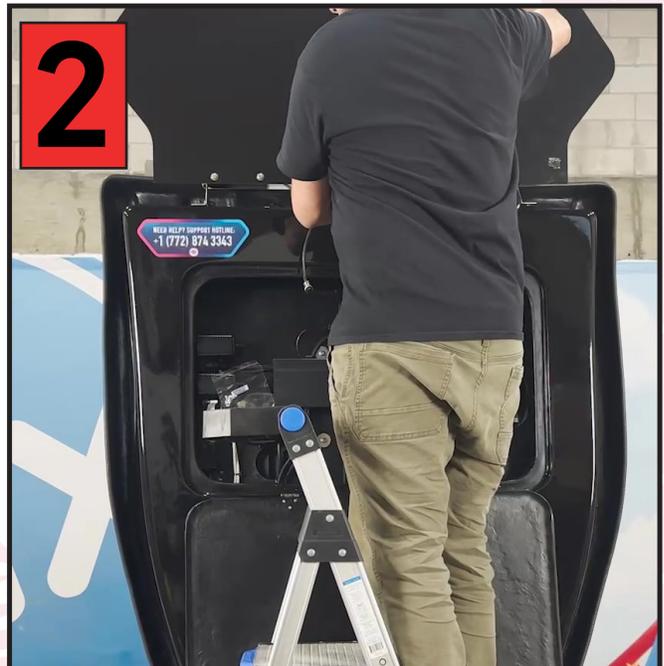

23 Position the four provided screws and nuts.

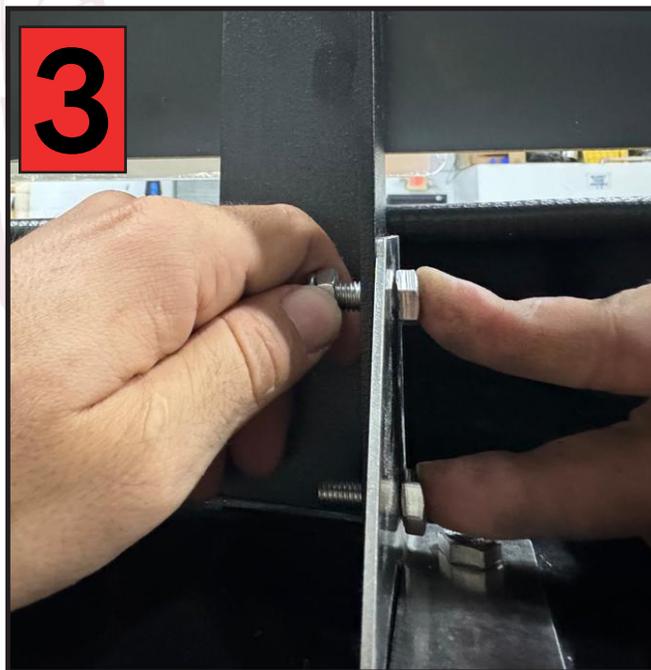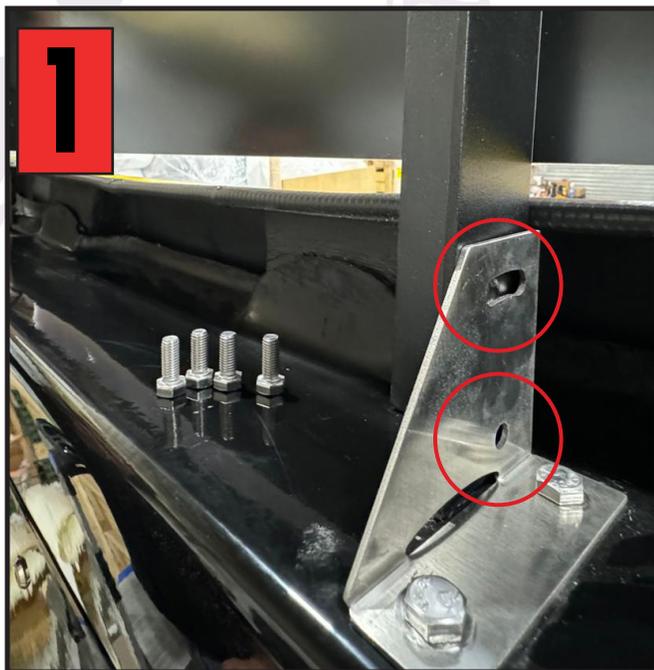


23

Fasten the screws using two 13mm wrenches.



24



Connect the cable to the corresponding connector.

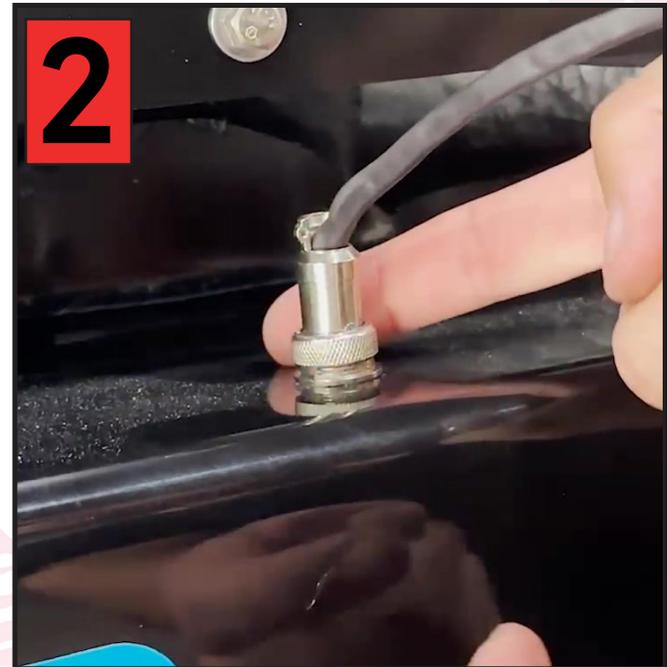




STEP 02 CONNECTING CABLES

- 1 Open the cardboard box and take the key.

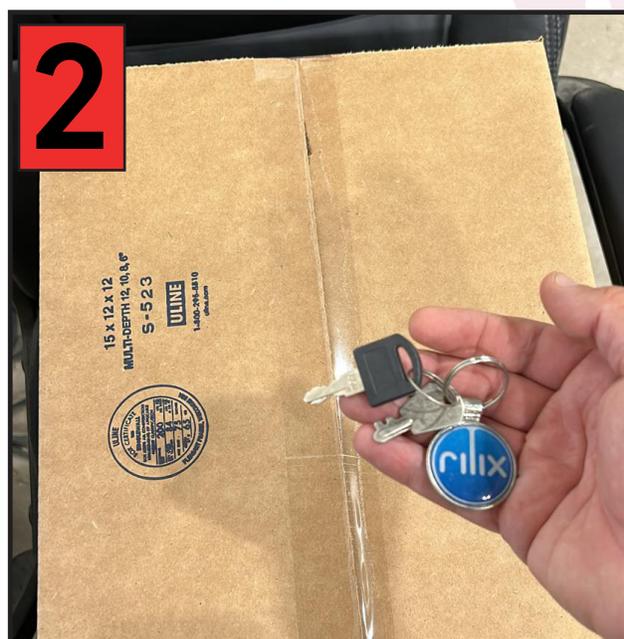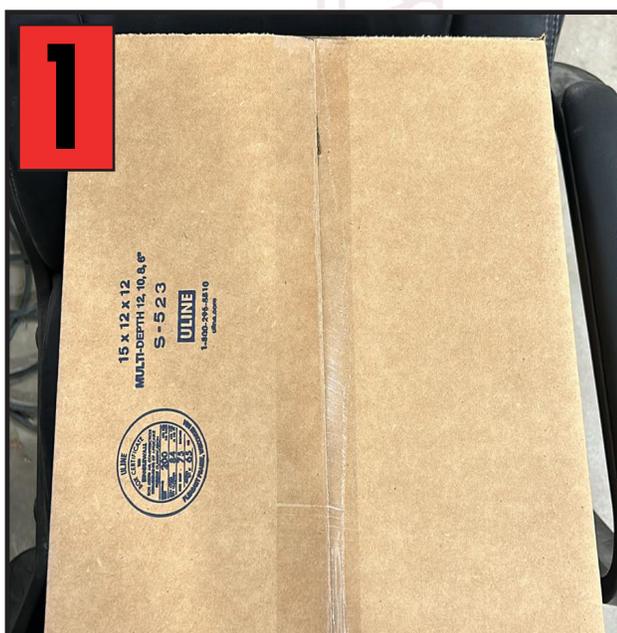

2 Open the lower rear door of the back display.

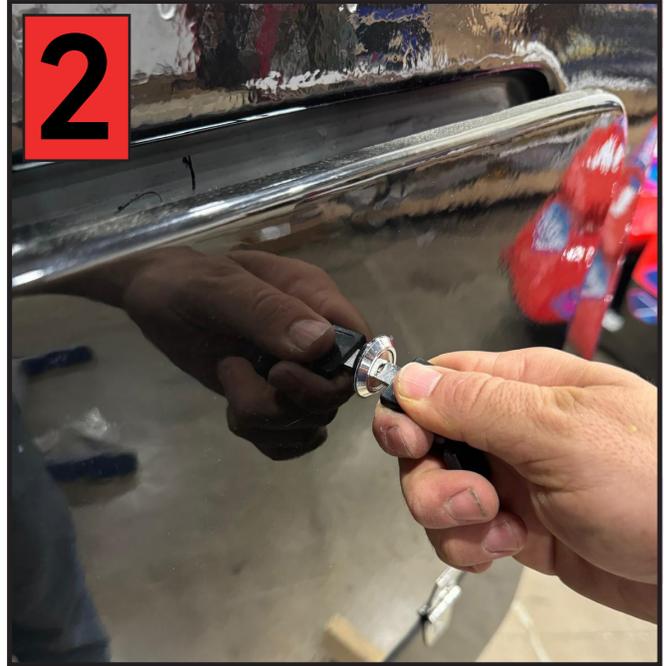

3 Pull out all the five cables.



4 Unwind the power cord.



5 Insert the power cord into the left pipe and grab it at the bottom of the base.




6

Connect it into the corresponding outlet.



7

Unwind the LED cable.

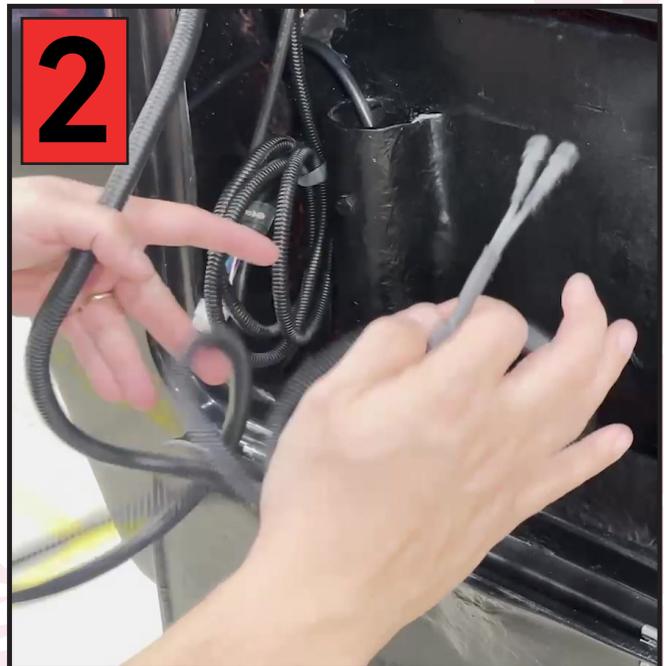

8

Insert the LED cable through the left pipe and grab it at the bottom of the base.



9

Connect the LED cables to the LED control center. Twist the connector's cap to secure it.




10

Unwind the sound system cable.



11

Insert the audio cable through the left pipe and grab it at the bottom of the base.

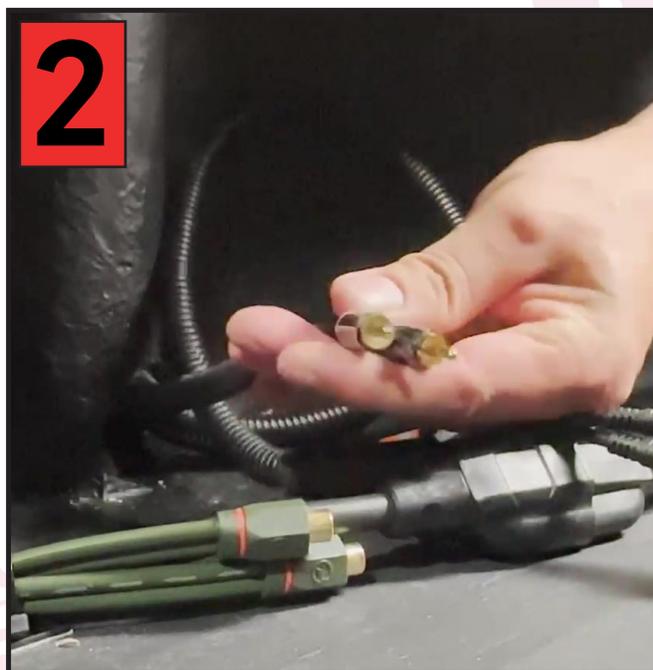


12

Connect the audio cable to the corresponding connector.




13

Unwind the wind system cable.

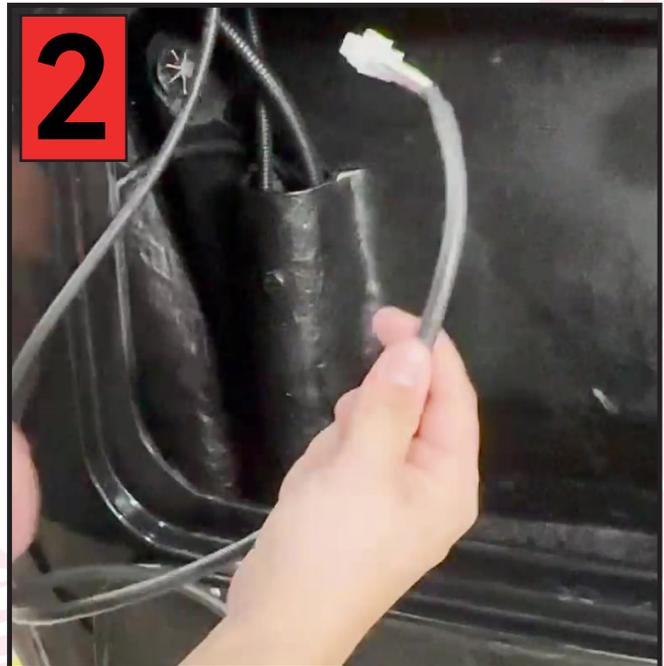



14

Insert the wind system cable through the left pipe and grab it at the bottom of the base.

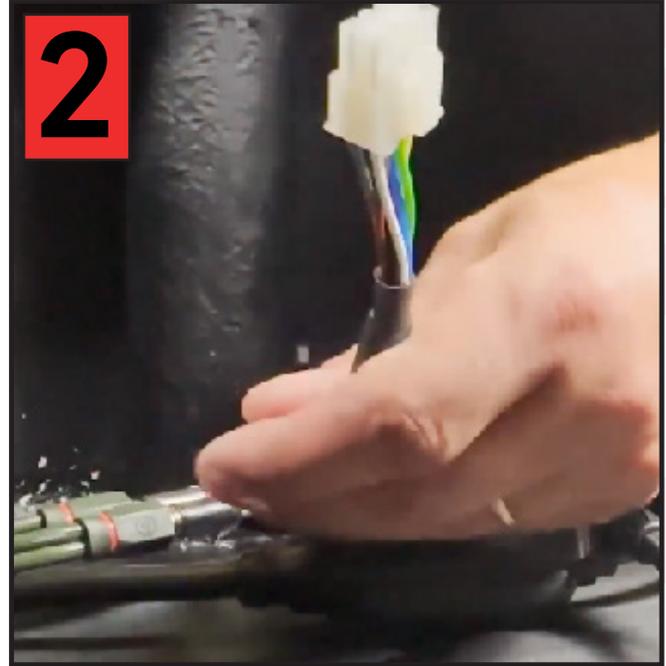

15

Connect the wind cable system to the corresponding connector.

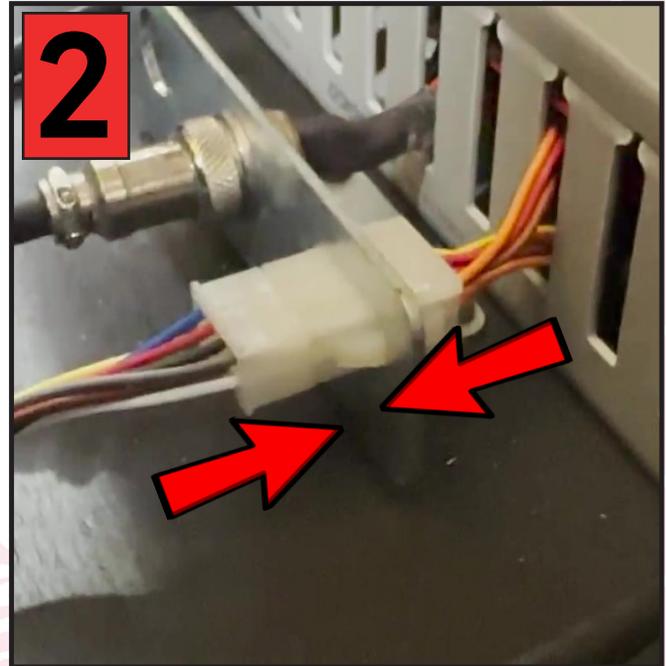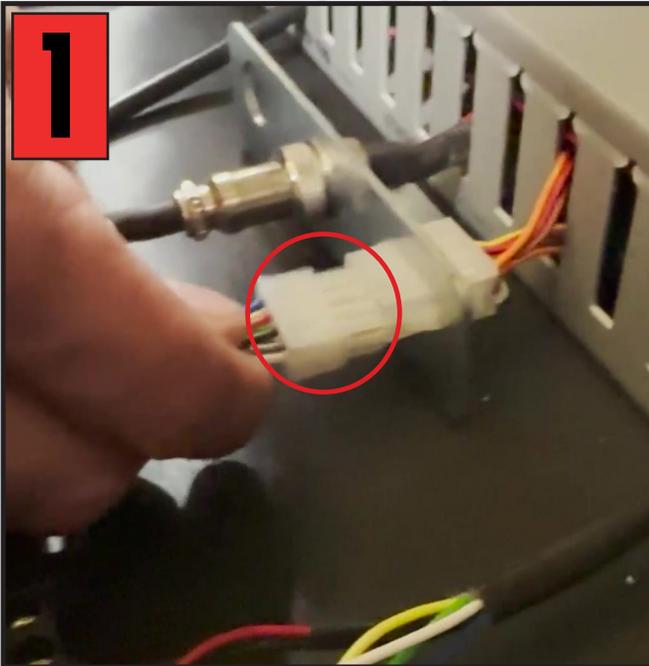


16

Unwind the second LED cable.




17

Insert the second LED cable through the right pipe and grab it at the bottom of the base.

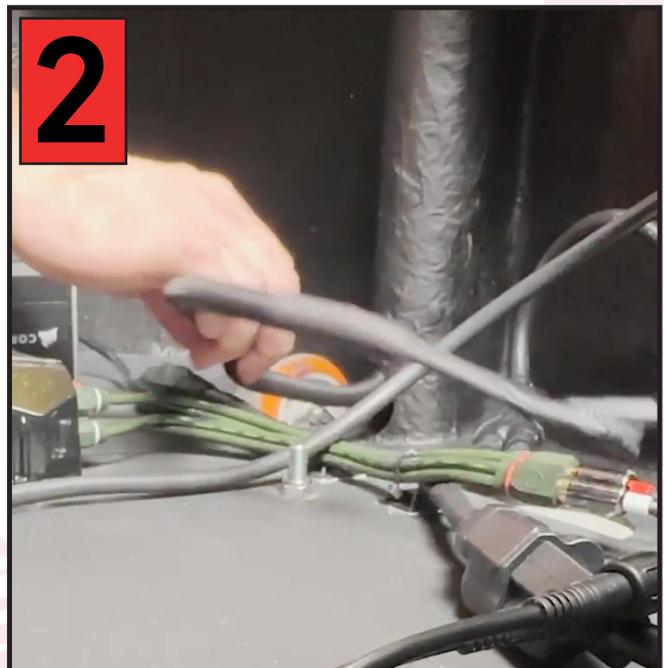

18

Connect the LED cables to the LED control center. Twist the connector to secure it.

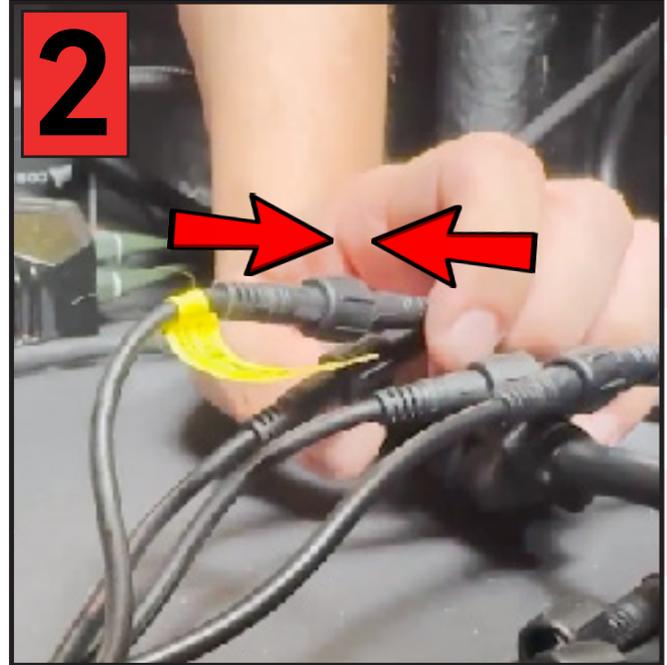

19

Unwind the LED cables that are inside the seat




20

Connect the LED cables to the LED control center. Twist the connector to secure it.




21

Connect the bass shaker cables matching the corresponding colors.

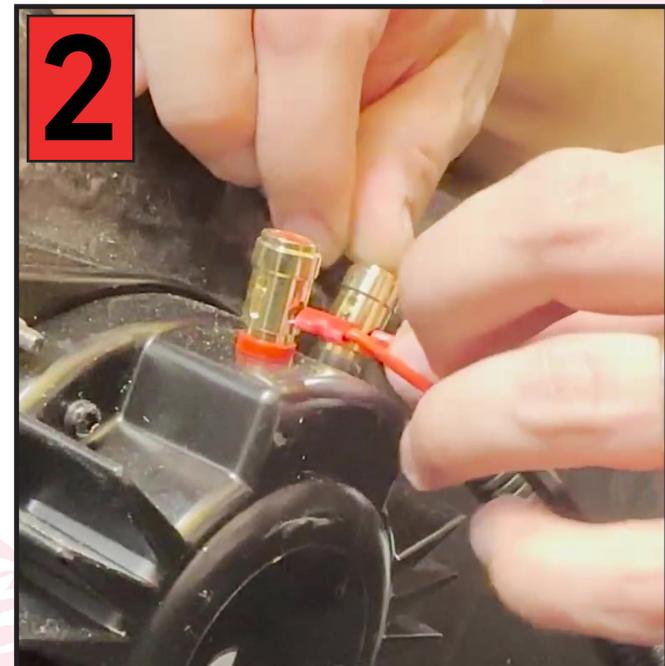

22

Pull the seat back to its position.

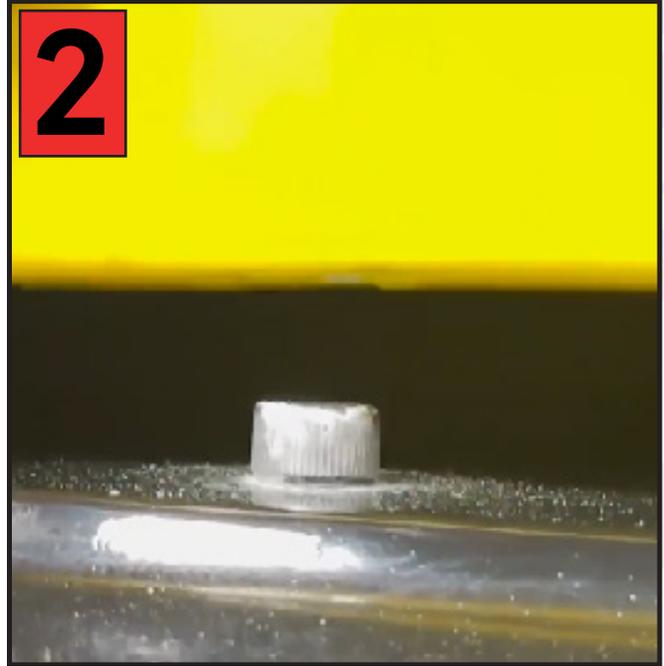

23

Close the locking latch.



24

Close the door and remove the key.



STEP 03

Setting Up Your VR Goggles

1


Open the upper rear door.



2 Position the goggles as indicated by the player order on the back display module.




3 Insert the Oculus cables through the corresponding access in the back display.

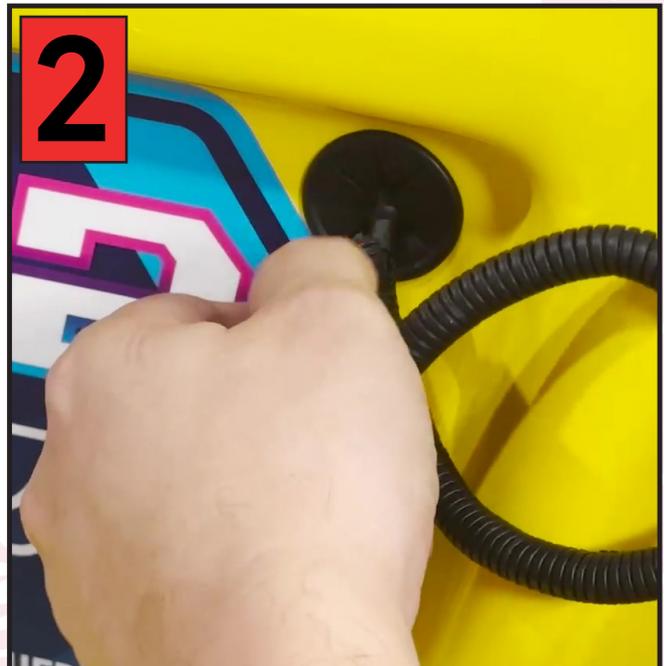

4 Pull the cable and connect the cable hook to the corresponding hanger.



5 Connect the USB cable in the indicated position.

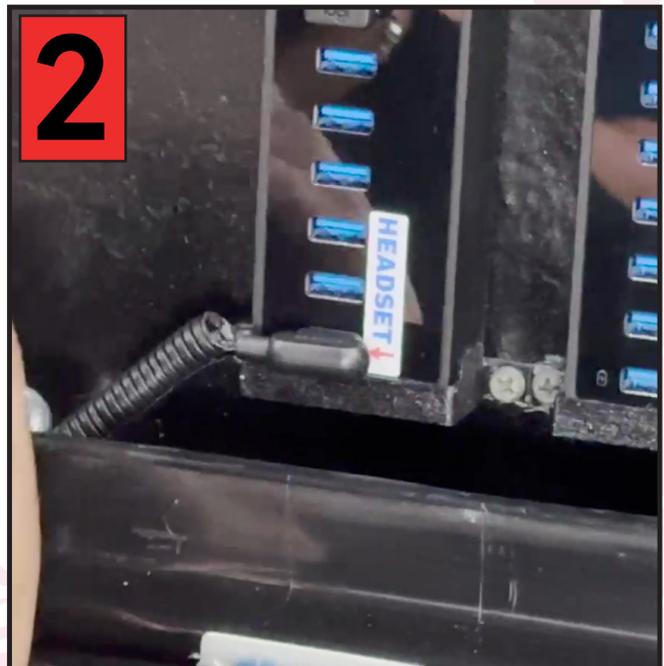

6 Using a small screwdriver or similar tool, press the power button until the light turns on.



7 Repeat the process for the other headset.




STEP 04 Completing the Setup

- 1** Using the provided power cord, plug the simulator into a power outlet.




2 Turn on the simulator by flipping the switch on the power strip inside the back display module.


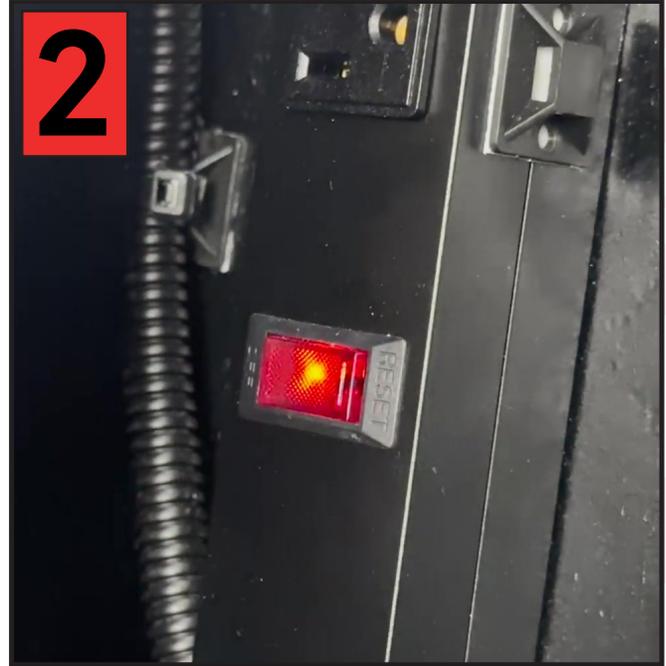


3 The startup sequence should begin automatically.



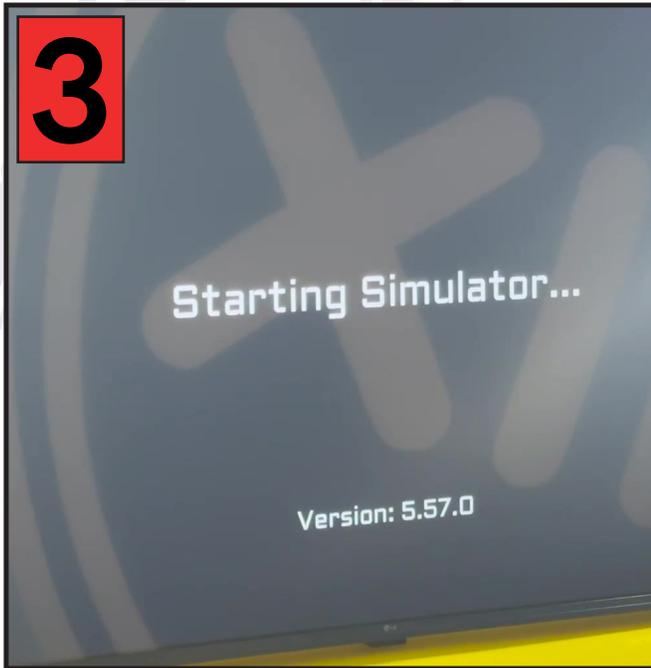

3 Secure the back display module to the seat using the provided screws. Tighten the screws with a 10mm wrench.

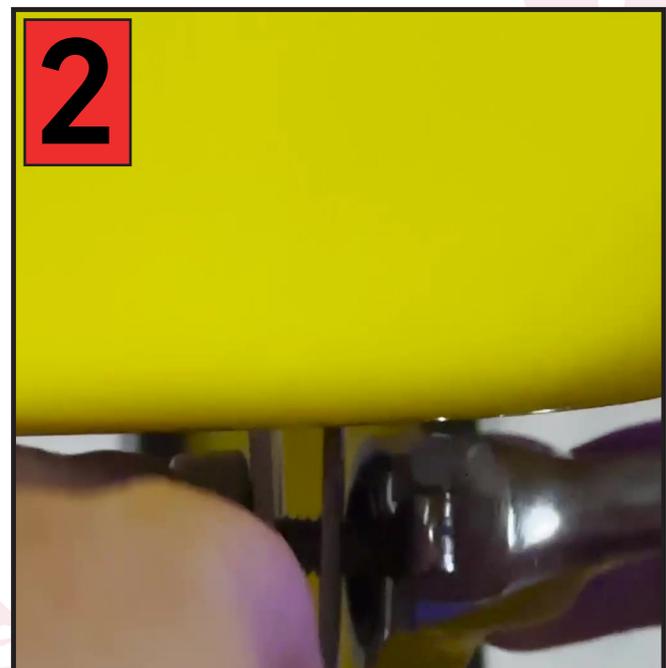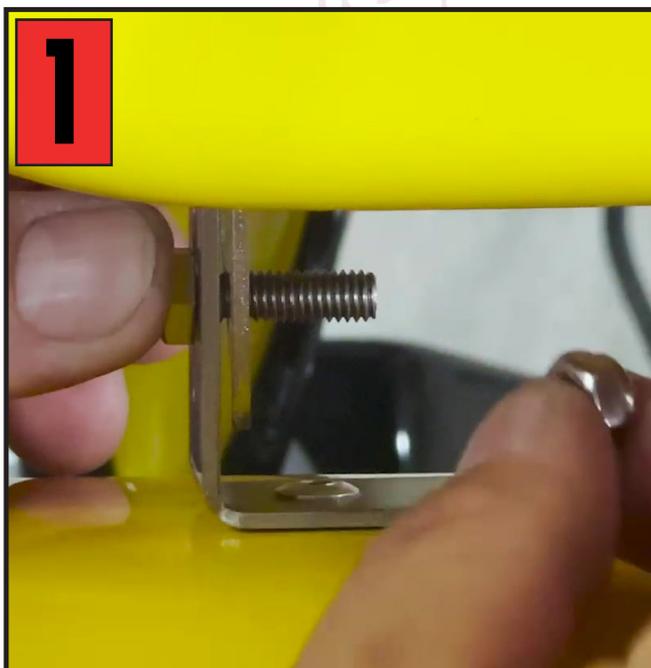

4 Close the top door and remove the key.



STEP 5

Installing the Wipes Dispenser


- 1** Remove the attached screws from the back of the seat.





2 Position the wipes dispenser aligned with the holes and secure it by tightening the four screws.



3 Using a blade, carefully make a small incision as indicated.

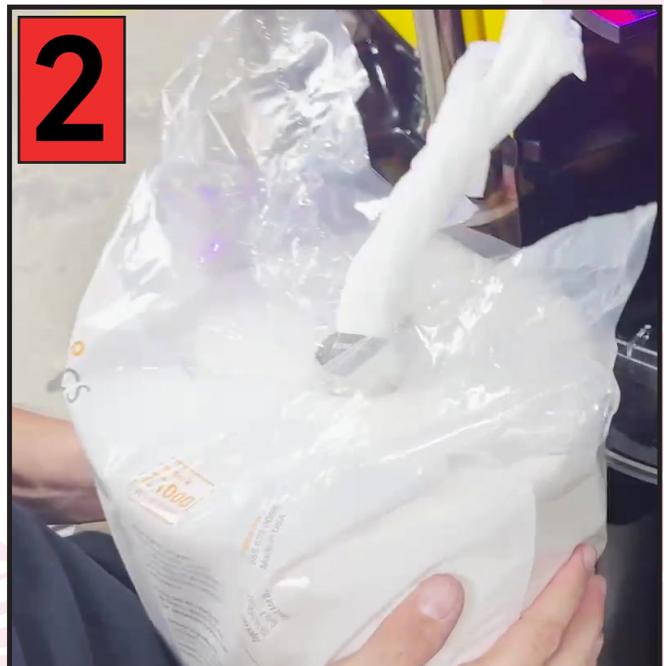

4 Place the roll of wipes inside the dispenser and pull a wipe through the access.

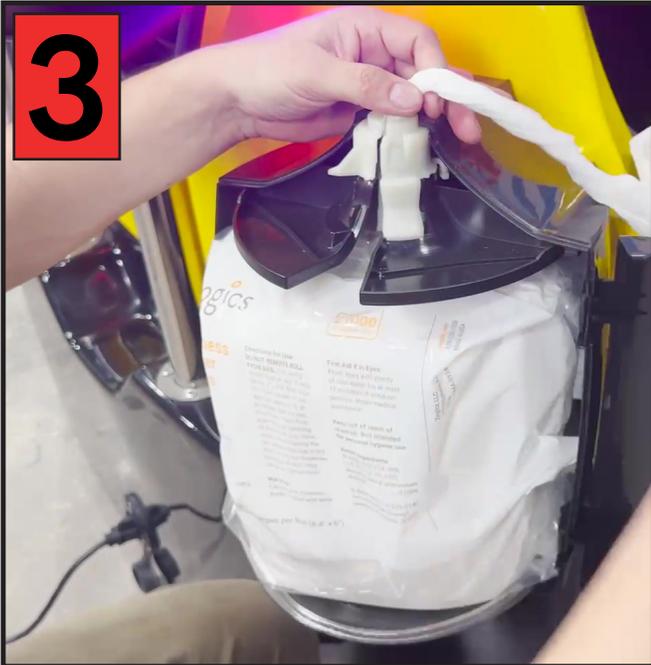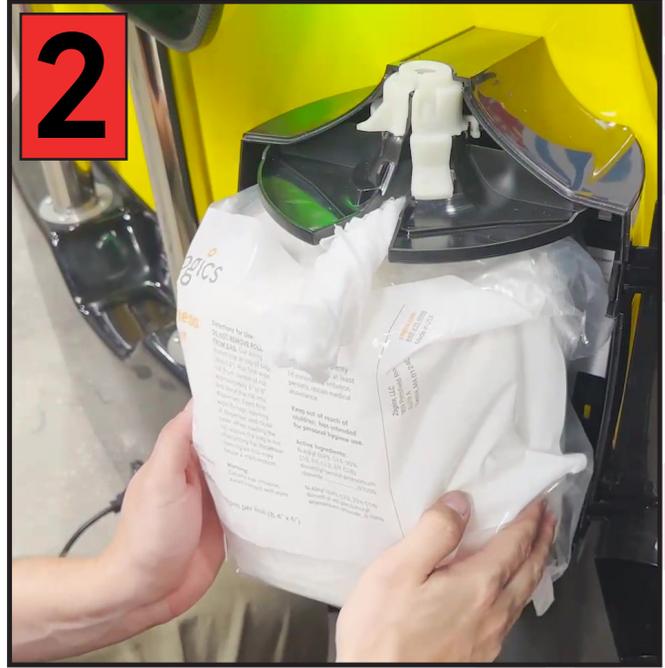



SUPPORT HOTLINE

+1 772 874 3343



[instagram.com/rilix_us](https://www.instagram.com/rilix_us)

700 S John Rodes Blvd, STE E5
Melbourne, FL 32904, United States

www.rilix.business